


PGS10E Guide System User Manual

PGS10E

Peerlink Group Supported

Public and Private Guide System and Service

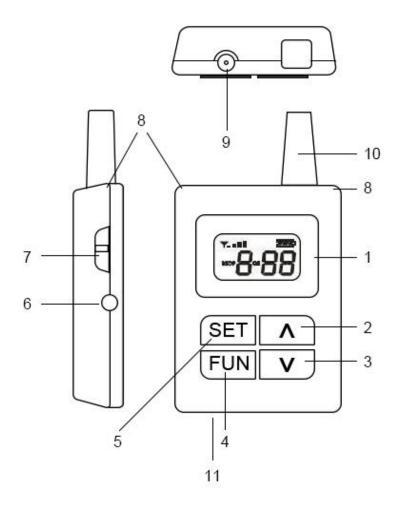

- 1. Screen
 - Signal/battery/channel display
- 2. UP key
- 3. Down key
- 4. Function key
- 5. Set button
- 6. Mic input for transmitter

- 6. Earphone input for receiver
- 7. On / off switch
- 8. Lanyard hole
- 9. Indicator light
- 10. Antenna
- 11. Mini USB charger port



PGS10E Guide System User Manual

PGS10E

Peerlink Group Supported
Public and Private Guide System and Service

Setup instructions:

- 1. Switch On/Off: Switch-up is power-on, switch-down is power-off. One digit number on the left of the screen is for volume display, and double digit numbers on the right is for channel display.
- 2. Change Channel: When device is switch on, press the "FUN" and " \vee " buttons at same time until the screen appears the flickering 'CH' to set or change channels. The screen display will show Channel number (00-99). Only when the transmitter and receiver are at the same channel, the tour guide system will work.
- 3. Transmitter volume Control: When transmitter is switch on, use " \land " and " \lor " to adjust volume. For example: Choose from 1- 4will transmit a larger sound for audio data input.
- 4. Receiver volume Control: When receiver is on, use " \wedge " and " \vee " to adjust volume.
- 5. Charging: please make sure all devices in the turn-off state when charging. The light will be off when charging is finished. Charging time is about 4 hours and please do not charging device over 8 hours.



Usually, a tour guide system consists of a microphone transmitter for the presenter, receivers with headphones for the audience and a charger storage case.

Frequency:	470-490 MHz (Can be customized)
Audio Input:	Microphone/Audio (Line in)
Output:	Earphone/Audio (3.5mm)
Channel:	100 channels
Distance:	100-150 meters
Power Supply:	Built-in Lithium Battery
Dimension:	70mm X 50mm X 17mm
Weight:	50 Grams Including Battery